


# PHILIPS

AZ 7376 Portable Compact Disc Player

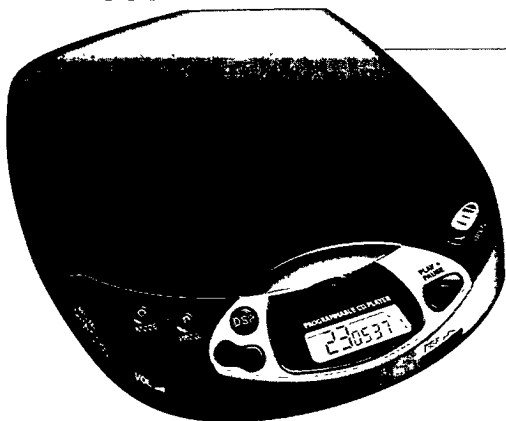

Instructions for use  
Mode d'emploi  
Instrucciones de manejo  
使用説明書



## PHILIPS

---

## **Australia**

Guarantee and Service.....page 60

## **New Zealand**

Guarantee and Service.....page 61

## **Mexico**

Es necesario que lea cuidadosamente su instructivo de manejo.

**VOM**

Garantía.....pág. 62

**English**

|                   |     |                           |       |
|-------------------|-----|---------------------------|-------|
| Controls .....    | 4-5 | Operation.....            | 10-14 |
| Accessories ..... | 6   | General Information ..... | 15    |
| Power Supply..... | 7   | Troubleshooting.....      | 16-17 |
| Connections.....  | 8-9 |                           |       |

**English****Français**

|                    |       |                          |       |
|--------------------|-------|--------------------------|-------|
| Commandes.....     | 18-19 | Fonctionnement.....      | 24-28 |
| Accessoires .....  | 20    | Généralités .....        | 29    |
| Alimentation ..... | 21    | Recherche de pannes..... | 30-31 |
| Branchements ..... | 22-23 |                          |       |



**Français****Español**

|                            |       |                             |       |
|----------------------------|-------|-----------------------------|-------|
| Mandos .....               | 32-33 | Funcionamiento .....        | 38-42 |
| Accesorios .....           | 34    | Información general .....   | 43    |
| Suministro de energía..... | 35    | Detección de anomalías..... | 44-45 |
| Conexiones.....            | 36-37 |                             |       |

**Español****中文**

|            |       |            |       |
|------------|-------|------------|-------|
| 控制器 .....  | 46-47 | 操作 .....   | 52-56 |
| 附件.....    | 48    | 一般說明 ..... | 57    |
| 電源供給 ..... | 49    | 故障排除 ..... | 58-59 |
| 連接 .....   | 50-51 |            |       |

**中文**

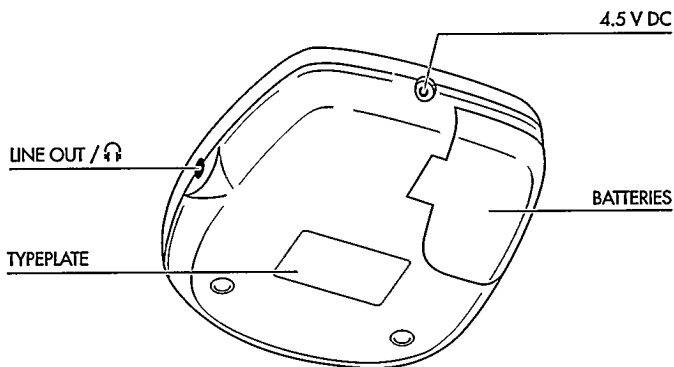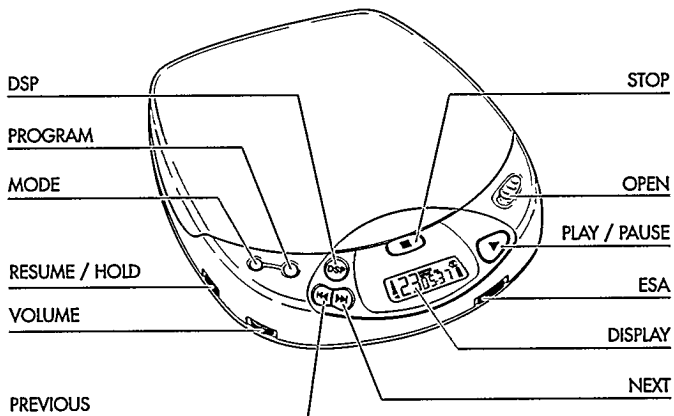

# CONTROLS

|   |  |
|---|--|
| <b>DISPLAY</b> .....                                | Window for showing the different playing modes, tracks and times.  |
| <b>▶▶</b> .....                                     | Button for selecting the next music track or, if held down, for searching forward for a particular passage on the CD.                                |
| <b>◀◀</b> .....                                     | Button for selecting the previous music track or, if held down, for searching-backward for a particular passage on the CD.                           |
| <b>VOLUME</b> .....                                 | Control for adjusting the volume of the headphones.  |
| <b>RESUME/HOLD</b> .....                            | Switch for activating the RESUME function (resuming CD play) and/or HOLD (blocking all buttons) function.  |
| <b>MODE</b> ○ .....                                 | Button for selecting the different playing modes:<br>SHUFFLE→SHUFFLE REPEAT ALL→REPEAT 1→REPEAT ALL<br>→SCAN→off                                     |
| <b>PROG P</b> .....                                 | Button for storing tracks in a program and for reviewing the program.  |
| <b>DSP</b> .....                                    | <b>Digital Sound Processing:</b> Button for selecting the different sound settings at the headphone output:<br>ROCK→POP→CAR→INCREDIBLE SURROUND→off. |
| <b>STOP</b> ■ .....                                 | Button for stopping CD play, deleting various settings, switching off the CD player.   |
| <b>OPEN</b> .....                                   | Slide control for opening the lid of the CD player.  |
| <b>PLAY PAUSE</b> ▶   .....                         | Button for starting and pausing CD play.   |
| <b>ESA</b> .....                                    | <b>Electronic Shock Absorption:</b> Switch for activating the electronic buffer memory for an undisturbed sound.                                     |
| <b>LINE OUT</b> / Ω .....                           | Headphone and LINE OUT jack (3.5 mm).  |
| <b>4,5 V DC</b> .....                               | Socket for external power supply.  |
| <b>Battery compartment</b> for inserting batteries. |  |

*Note: If you use the DC jack (power adapter or car cigarette lighter) the display and the play button are backlit. If you use battery power, the display is lighted for 10 seconds after key operations.*

# ACCESSORIES

## Accessories

### Accessories for power supply

AY 3160 power adapter 4.5 V/400 mA Direct current, plus-pole to the center pin

*Note: Use only the AY 3160 adapter, other products may damage the set.*

### Car accessories

AY 3545 - car voltage converter (4.5 V/600 mA, Direct Current, plus-pole to the center pin)

AY 3501 - car adapter cassette

## Technical Data


|                                       |                                |
|---------------------------------------|--------------------------------|
| Frequency range .....                 | 20 - 20000 Hz                  |
| Signal-to-noise ratio .....           | typ. 95 dBA                    |
| Channel separation .....              | typ. 70 dBA                    |
| Total harmonic distortion .....       | typ. 0.05 %                    |
| Conversion.....                       | Bitstream D/A Converter        |
| Batteries.....                        | 2 x 1.5 V, type AA / LR6 / UM3 |
| Dimensions (w x h x d).....           | 134 x 30.5 x 154 mm            |
| Weight (without/with batteries) ..... | approx. 250/290 gms            |

# POWER SUPPLY

English


## Power adapter

- 1 Make sure that the local voltage corresponds to the voltage of the adapter (see accessories).
  - 2 Connect the power adapter to the player's 4.5 V DC socket and to the wall outlet.
- Always disconnect the adapter when you are not using it.

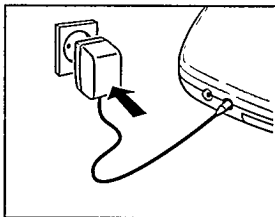


## Batteries, type LR6, UM3 or AA (supplied or optional available)


- Open the battery compartment and insert 2 alkaline batteries.
- Typical playing times under normal conditions:  
Alkaline batteries: 5.5 hours (ESA off)  
4.5 hours (ESA on)
- Remove the batteries if they are dead or if the CD player is not to be used for a long time.

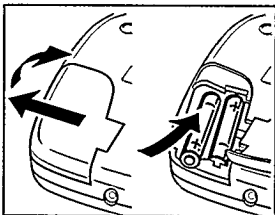

*Note: In the right-hand corner of the display the battery condition will be indicated:*

**-Full batteries:** no indication.

 
**-Weak batteries:**  -symbol lights up. This symbol is not available when rechargeable batteries are used.

**-Dead batteries:**  -symbol flashes and the message  $\text{bAt}$  appears. Replace the batteries or connect the power adapter.


**Batteries contain chemical substances, therefore they should be disposed of properly.**

# CONNECTIONS

## Connecting headphones (supplied)

- Connect the supplied headphones (16 ohms/ 3.5mm plug) at the LINE OUT /  jack.

*Note : Use this jack also for connecting your HiFi system (signal lead) or your car radio (adapter cassette or signal lead). In both cases, the volume of the CD player has to be set to maximum position (10).*

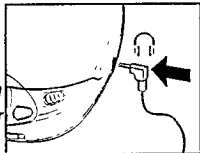

### Use your head when using headphones


**Hearing safety:** Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage hearing.


**Traffic safety:** Do not use headphones while driving a vehicle. It may create a hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.




## Connections for in-car use

- 1 Find a safe place for the CD player on a horizontal, vibration-free and stable surface that is not dangerous or in the way of the driver or passengers.
- 2 Connect the DC plug of the voltage converter to the DC socket of your CD player

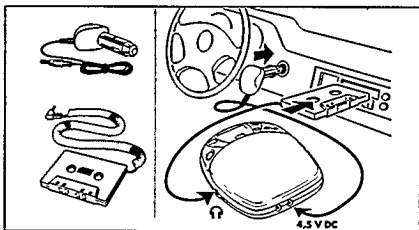

- (only for a 12 V car battery, negative grounding).**
- 3 Insert the voltage converter into the cigarette lighter socket. If necessary, clean the cigarette lighter socket to obtain a good electrical contact.
  - 4 Turn down the volume and **switch off the autoreverse function (if present) of your car radio cassette player.**
  - 5 Connect the adapter cassette plug to the LINE OUT /  socket of the CD player.
  - 6 Slide the adapter cassette carefully into the car radio's cassette compartment.
  - 7 Make sure that the cord does not hinder your driving.
  - 8 Start the CD player, turn its volume to maximum position (10) and adjust the sound with the car radio controls.
- To remove the adapter cassette press the eject button of the car radio.
  - Always remove the voltage converter from the cigarette lighter socket when the CD player is not in use.


### Notes on In-car Use:

- Avoid excessive heat from the car heating or from direct sunlight (e.g., in a parked car in the summer).
- If your car radio has a LINE IN jack, it is best to use it for the car radio connection instead of the adapter cassette. Connect the signal lead to this LINE IN jack and the LINE OUT /  jack of the CD player.

# OPERATION


## Inserting the CD

- Push gently on the CD center so that it fits onto the hub.

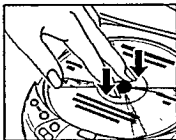


## Removing the CD

- Hold the CD by its edge and press the hub gently.

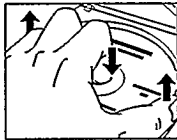


## Playing a CD

- 1 Open the lid by pushing the OPEN slide control to the side.
- 2 Insert an audio CD, printed side up.
- 3 Close the lid by pushing down on the right-hand side.

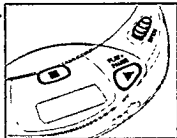

→ Display indication of: (example)

 
17 = total number of tracks / 51:06 = total playing time



- 4 Press the ►II button to start CD play.

→ Display indication of: (example)

 4 = current track / 2:56 = elapsed time of current track




- 5 Adjust the sound using the controls VOLUME and DSP.
  - 6 You can interrupt CD play by pressing the ►II button. Continue CD play by pressing the ►II button again.
    - Display indication of: time of the current position (flashing).
  - 7 Press the STOP ■ button to stop CD play.
    - Display indication of: total number of tracks / the total playing time.
- If you press the STOP ■ button again, you will switch off the set.

*Note: If no button is pressed for 90 seconds, the set will switch off automatically.*



## Selecting another track

- Briefly press the ◀◀ or ▶▶ button once/several times to skip to the beginning of the current/previous or next track(s).
  - Display indication of: selected track number.
  - During play: CD play continues automatically with the selected track.
  - In stop position: press the ▶II button to start CD play.

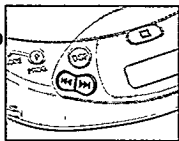

## Searching for a passage during CD play


- 1 Hold down the ◀◀ or ▶▶ button to find a particular passage in forward or backward direction.
  - After 2 seconds, searching will start at high speed.
- 2 Release the button when you have reached the desired passage.

*Note: Searching is only possible within the particular track when you are in one of these modes: SHUFFLE, REPEAT 1 or PROGRAM. Searching is not possible in the SCAN mode.*

# OPERATION

## MODE ○ – different playing modes

- By pressing the MODE ○ button, you can successively activate the playing modes:

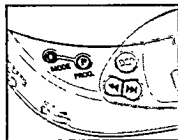

**SHUFFLE:** The tracks are played *in random order* until all of them have been played once.

**SHUFFLE REPEAT ALL:** All tracks are played *repeatedly in random order* until you leave this mode.

**REPEAT 1:** The track is played *repeatedly* until you leave this mode.

**REPEAT ALL:** The CD is played *repeatedly* until you leave this mode.

**SCAN:** Each track is scanned for 10 seconds until you leave this mode or all tracks have been played once.

- ➔ The selected playing mode is indicated in the display.
- ➔ During play: CD play continues automatically with the selected playing mode.
- ➔ In stop position: press the ►|| button to start CD play.


### Notes:

 - You can choose from 12 different playing modes when you combine all the above-mentioned modes with PROGRAM.
- Deactivate all modes with the MODE ○ button.

## PROG P – programming of tracks (max. 25 tracks)



- 1 Select the desired track with PREV ◀◀ or NEXT ▶▶.
- 2 As soon as the desired track is displayed, press the PROG button to store the track in the memory.

→ Display indication of: track number  
/ P / total number of stored tracks, e.g.



### Notes:

  - When you try to store more than 25 tracks, the display indicates *FULL*.
- When you press PROG and there is no track selected, the display indicates *SELECT*.



### Playing the program:

- If you have selected the tracks in STOP mode, press the PLAY/PAUSE ▶|| button.
- If you have selected the tracks during CD play, first press STOP ■ and then the PLAY/PAUSE ▶|| button.
  - Display indication: PROGRAM.
  - Your program will be played in the selected playing mode (e.g. shuffle).

### Reviewing the settings:

- Press the PROG button for more than 2 seconds.
  - Display indication: each stored track successively flashes for a short moment.

### Erasing the program in STOP mode:


- Press the STOP ■ button to erase the program.
  - PROGRAM disappears on the display and your program is erased.
  - *CLERF* lights up briefly on the display.

*Note: Interrupting the power supply or opening the lid will also erase the program.*

# OPERATION

## ESA – Electronic Shock Absorption Memory

- Activate the ESA memory by sliding the ESA switch to the right.
  - ➔ The ESA symbol lights up in the display.
  - ➔ The ESA memory continuously stores in advance the CD data to be played. This is to prevent sound skipping during play due to shock and vibration.
  - ➔ Prolonged shocks and vibrations may empty the ESA memory completely. Then the display shows *SOFFY* and there will be no sound.

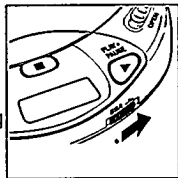


*Note: When switching the ESA feature on and off, CD play will be delayed or interrupted for a short time.*

## RESUME / HOLD

### RESUME – playing from where you have stopped

- Activate the RESUME feature by sliding the RESUME/HOLD switch to the middle.
- If you stop CD play by pressing the STOP ■ button, the last played position will be stored.
- Press ►II to resume CD play from the position where it was stopped.

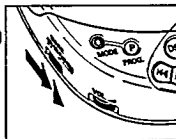

### HOLD – deactivating all buttons

- Activate the HOLD feature by sliding the RESUME/HOLD switch to the far right.
  - ➔ Now all buttons are deactivated and will not function until you switch the feature off again. If you press a button (except OPEN), the display will indicate HOLD.

*Notes:*



*-In the hold position, the resume function is automatically activated.*

*-Do not open the lid as this erases the information about the last position played.*

# GENERAL INFORMATION

## Maintenance

- The lens (X) of the CD player should never be touched!
- Do not expose the CD player, batteries or CDs to rain, dampness, sand, dust or excessive heat caused by heating equipment, or to direct sunlight.
- The lens may cloud over when the set is suddenly moved from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.
- You can clean the CD player with a soft and slightly dampened chamois leather. Do not use any cleaning agents as they may have a corrosive effect.
- Always pick up the CD by the edge and put it back in its box after use.
- To clean the CD, wipe it off in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc!
- When a new CD does not stay on the hub, this is caused by small burrs around the center hole of the CD. Remove the burrs by rubbing the edge of the center hole with a pen or similar instrument.

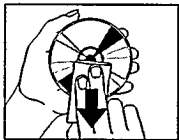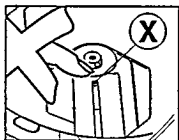

## Environmental information

- Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and obsolete equipment.
- All redundant packaging material has been omitted. We have tried to make the packaging easy to separate into three mono-materials: cardboard (box), expandable polystyrene (buffer), and polyethylene (bags, protective foam sheet).
  - Your set consists of materials which can be recycled if disassembled by a specialized company.
  - Do not dispose of exhausted batteries with your household waste.

# TROUBLESHOOTING

- If a fault occurs, please check the points listed below before taking your set for repair.
- If you are not able to solve a problem by following these hints, consult your dealer or service facility.

| PROBLEM                                   | POSSIBLE CAUSE  | SOLUTION  |
|---|---|---|
| No power or CD play won't start           | <b>Batteries</b>  |   |
|   | Batteries incorrectly inserted                                  | Insert the batteries correctly.                                 |
| Display: no indication                    | Use of new batteries  | Press ►II.  |
|   | Batteries are dead.   | Change/recharge the batteries.                                  |
|   | Contact pins are dirty.   | Clean them with a cloth.  |
|   | <b>power adapter</b>  |   |
|   | Loose connection  | Connect the adapter securely.                                   |
| CD play does not start or is interrupted. | <b>In-car use</b>   |   |
|   | Cigarette lighter is not powered when ignition is switched off. | Switch on ignition or insert batteries.                         |
|   | <b>HOLD feature is activated.</b>                               | <b>Switch off the HOLD feature.</b>                             |
| Display: no indication or no disc         | CD lid is not closed securely.                                  | Close the lid securely.   |
|   | Moisture condensation   | Leave the player in a warm place until the moisture evaporates. |
| Display: no indication                    | CD is not or incorrectly inserted.                              | Insert a CD, label facing up.                                   |
|   | CD is badly scratched   | Use another CD.   |
|   | CD is dirty.  | Clean the CD.   |
| Play does not start from the first track. | RESUME, SHUFFLE or PROGRAM is activated.                        | Switch off RESUME, SHUFFLE or PROGRAM.                          |



# TROUBLESHOOTING

Under no circumstances should you try to repair the unit yourself, as this will invalidate the warranty.

| PROBLEM                       | POSSIBLE CAUSE   | SOLUTION   |
|-------------------------------|--|--|
| General malfunction           | Electrostatic discharge from the user via the CD player                        | Disconnect the set from the power supply or take out the batteries for a few seconds |
| No sound or bad sound quality | PAUSE is activated   | Press ►II  |
|                               | Loose or wrong connections   | Check connections  |
|                               | Volume is not turned up  | Adjust the volume  |
|                               | Headphones worn the wrong way  | Pay attention to the <b>L</b> (left) and <b>R</b> (right) indications                |
|                               | Headphone plug is dirty  | Clean the headphone plug   |
|                               | Strong magnetic fields near the CD player                                      | Change the player's position or connections  |
|                               | <b>In car use</b>  |  |
|                               | Strong vibrations  | Find another place for the set   |
|                               | Adapter cassette is incorrectly inserted                                       | Insert the adapter cassette correctly  |
|                               | Temperature inside car is too high/low   | Let the CD player adjust to the temperature  |
| Hum or noise in car           | Cigarette lighter/socket is too dirty  | Clean the cigarette lighter/socket   |
|                               | Wrong playback direction of the autoreverse feature of the car cassette player | Change the autoreverse direction   |
| Hum or noise in car           | Unfit car radio input socket   | Use the adapter cassette   |

# AUSTRALIA

## Guarantee and Service valid for Australia

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

- C-series HiFi-systems 12 months.
- Compact Disc Players: 12 months.
- Home Audio Systems: 6 months.
- Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

**Note:** Please retain your purchase docket to assist prompt service.

### Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

**Philips Consumer Products Division  
Technology Park  
Figtree Drive, Australia Centre  
Homebush 2140  
New South Wales**

## Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

### The Guarantee Controller

Philips New Zealand Ltd.

✉ P.O. Box 41.021

Auckland

☎ (09) 84 94 160

fax ☎ (09) 84 97 858

## Garantía para México

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestras Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.

Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo.

Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de este instructivo haya sido debidamente llenado en el momento de la compra del aparato.

En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.

 
Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con:

**Oficinas Centrales de Servicio,  
Av. Coyoacán No. 1051,  
Col. del Valle,  
03100 México, D.F.  
☎ 5-75-20-22 o 5-75-01-00**



---

**Meet Philips at the Internet**  
**<http://www.philips.com>**



**CLASS 1**  
**LASER PRODUCT**